
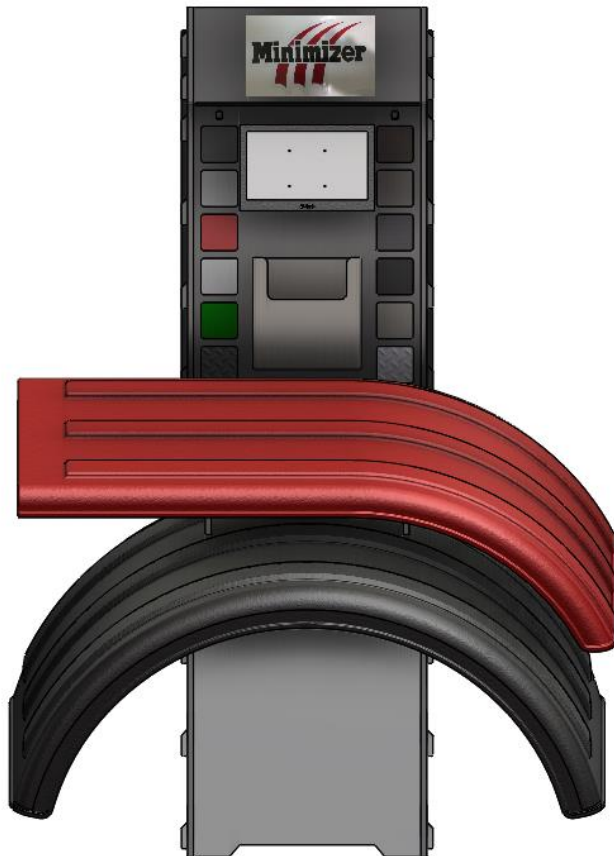
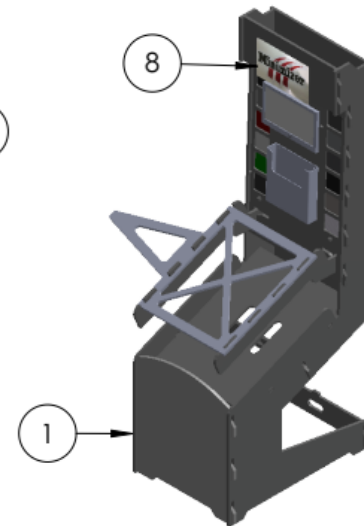
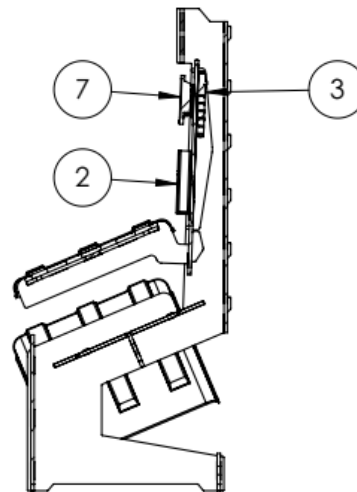


| | | | | | | |
|--|--|------------|-----|----------------|------------|----------|
|  | Document Title | | | | Document # | Revision |
| | Assembly Instructions for Fender Display Kit #104463 | | | | 104759 | 1 |
| | Author | Checked By | | Effective Date | DCN # | Page 1 |
| | BAG | MJL | TJL | 7/12/2019 | 212 | |


Assembly Instructions for Fender Display Kit #104463




: I




| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|--------------------------------|------|
| 1 | 104462 | POP,DSPLY,FNDR,STAND | 1 |
| 2 | 104110 | POP,DSPLY,PLSTC,LIT,TRAY,SNGL | 1 |
| 3 | 102558 | HDWR,OUTSTP-6,SRGE,PRTCTR,25FT | 1 |
| 4 | 104120 | HDWR-K,DSPLY | 1 |
| 7 | 104465 | POP,DSPLY,FNDR,MNTR-K | 1 |
| 8 | 104113 | POP,DSPLY,DCL,MNZR,LOGO,V2 | 1 |
| 9 | 104049 | BOX,72X36.625X1.75,CBTRD,ECT48 | 1 |
| 10 | 104781 | POP-K,SMPLS,FNDR,SQ | 1 |

|  | Document Title | | | | Document # | Revision |
|--|--|------------|-----|----------------|------------|----------|
| | Assembly Instructions for Fender Display Kit #104463 | | | | 104759 | 1 |
| | Author | Checked By | | Effective Date | DCN # | Page 2 |
| | BAG | MJL | TJL | 7/12/2019 | 212 | |


- Tools Required:
 - #2 Phillips screw driver
 - Mallet or small hammer
- Step 1: Open the box and identify components
 - Monitor kit
 - Power strip
 - Literature rack with hardware and decal
 - Color sample pack
 - Poly display panels
- Step 2: Install Minimizer decal to panel 104451

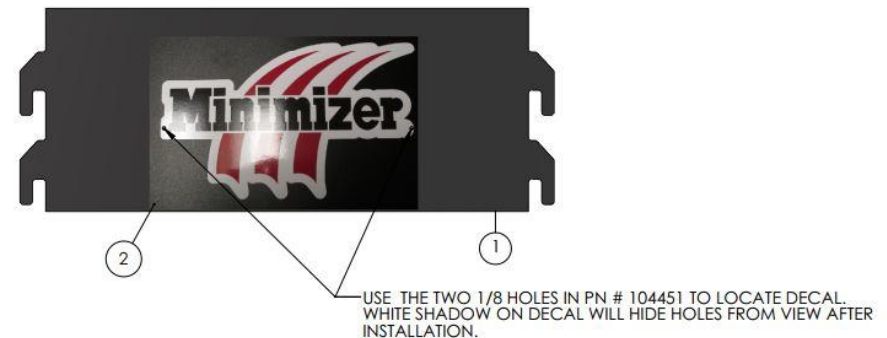


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-----------------------------|------|
| 1 | 104451 | POP,DSPLY,FPVC,FRNT,TOP,BLK | 1 |
| 2 | 104113 | POP,DSPLY,DCL,MNZR,LOGO,V2 | 1 |

| | | | | | | |
|--|--|------------|-----|----------------|------------|----------|
|  | Document Title | | | | Document # | Revision |
| | Assembly Instructions for Fender Display Kit #104463 | | | | 104759 | 1 |
| | Author | Checked By | | Effective Date | DCN # | Page 3 |
| | BAG | MJL | TJL | 7/12/2019 | 212 | |

- Step 3: Assemble front panel (104497)
 - Place color samples in the exact locations shown
 - Textured surfaces and decorative film must be toward the customer
 - Use bracket 104459 (QTY 2) to clamp color samples in place.
 - Insert one end of the bracket in the slot and tap lightly on the opposite end to snap in place.


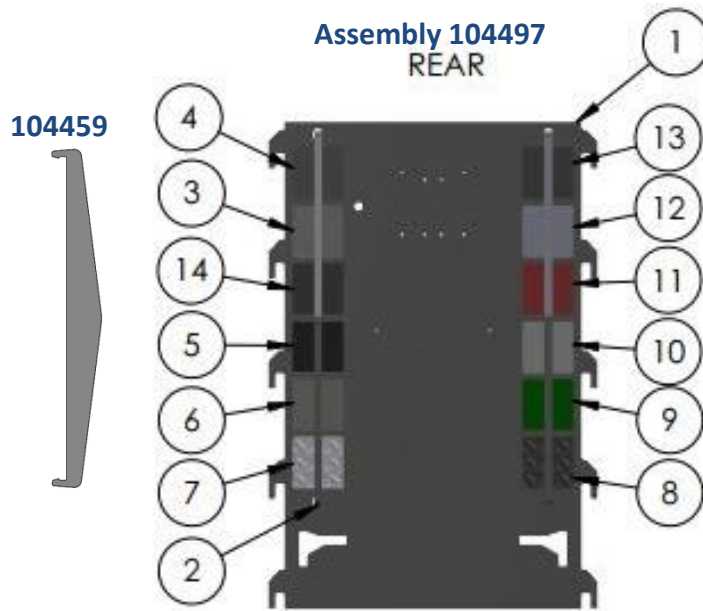



| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|------------------------------|------|
| 1 | 104454 | POP,DSPLY,HDPE,SMPL,PNL,BLK | 1 |
| 2 | 104459 | POP,DSPLY,HDPE,BRKT,BLK | 2 |
| 3 | 104472 | POP,SMPL,FNDR,TPO,SLVMIR,SQ | 1 |
| 4 | 104473 | POP,SMPL,FNDR,TPO,BLKMIR,SQ | 1 |
| 5 | 104476 | POP,SMPL,FNDR,TPO,PNTBL,SQ | 1 |
| 6 | 104474 | POP,SMPL,FNDR,TPO,LPL,SQ | 1 |
| 7 | 104477 | POP,SMPL,FNDR,PE,DPLT,SLV,SQ | 1 |
| 8 | 104478 | POP,SMPL,FNDR,PE,DPLT,BLK,SQ | 1 |
| 9 | 104480 | POP,SMPL,FNDR,PE,GRN,SQ | 1 |
| 10 | 104482 | POP,SMPL,FNDR,PE,WHT,SQ | 1 |
| 11 | 104481 | POP,SMPL,FNDR,PE,RED,SQ | 1 |
| 12 | 104475 | POP,SMPL,FNDR,PE,GLV,SQ | 1 |
| 13 | 104479 | POP,SMPL,FNDR,PE,BLK,SQ | 1 |
| 14 | 104471 | POP,SMPL,FNDR,TPO,CFBR,SQ | 1 |

| | | | | | | |
|--|--|------------|-----|----------------|------------|----------|
|  | Document Title | | | | Document # | Revision |
| | Assembly Instructions for Fender Display Kit #104463 | | | | 104759 | 1 |
| | Author | Checked By | | Effective Date | DCN # | Page 4 |
| | BAG | MJL | TJL | 7/12/2019 | 212 | |

• Step 4: Assemble poly framework to front panel



- Insert tabs into slots
 - Install side panel 104453
 - Install front logo panel 104501
 - Install braces 104460 (Qty 2)
 - Install lower front panel 104452
- Install remaining side panel

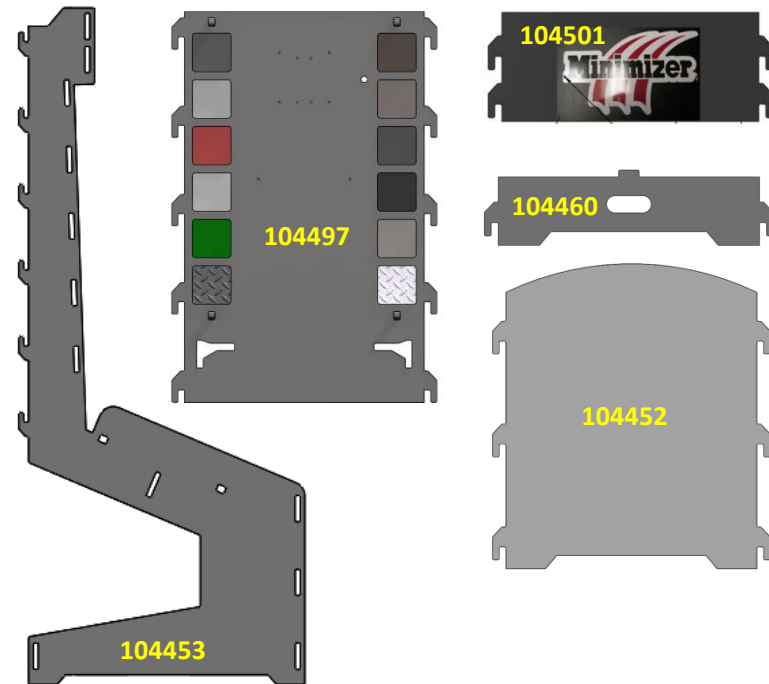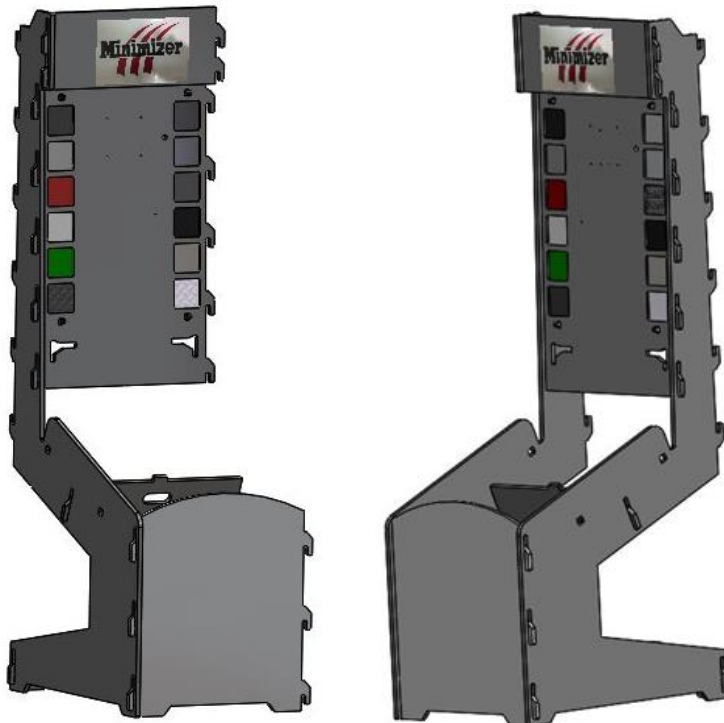


| | | | | | | |
|--|--|------------|-----|----------------|------------|----------|
|  | Document Title | | | | Document # | Revision |
| | Assembly Instructions for Fender Display Kit #104463 | | | | 104759 | 1 |
| | Author | Checked By | | Effective Date | DCN # | Page 5 |
| | BAG | MJL | TJL | 7/12/2019 | 212 | |


- Step 5: Install power strip


- On the back of panel 104497 Install (4) screws from hardware kit 104120 into the pre-drilled holes.
- **Leave the head of the screw 1/8" above the surface of the panel**
- Slide the power strip on the mounting screws with the power cord aimed toward the floor
- Plug the monitor power cord into the power strip
- Route the female end of the monitor cord through the 1/2" hole in the panel. See graphic below.

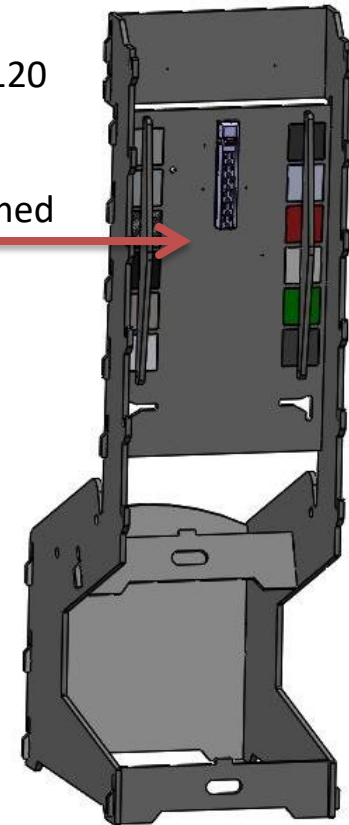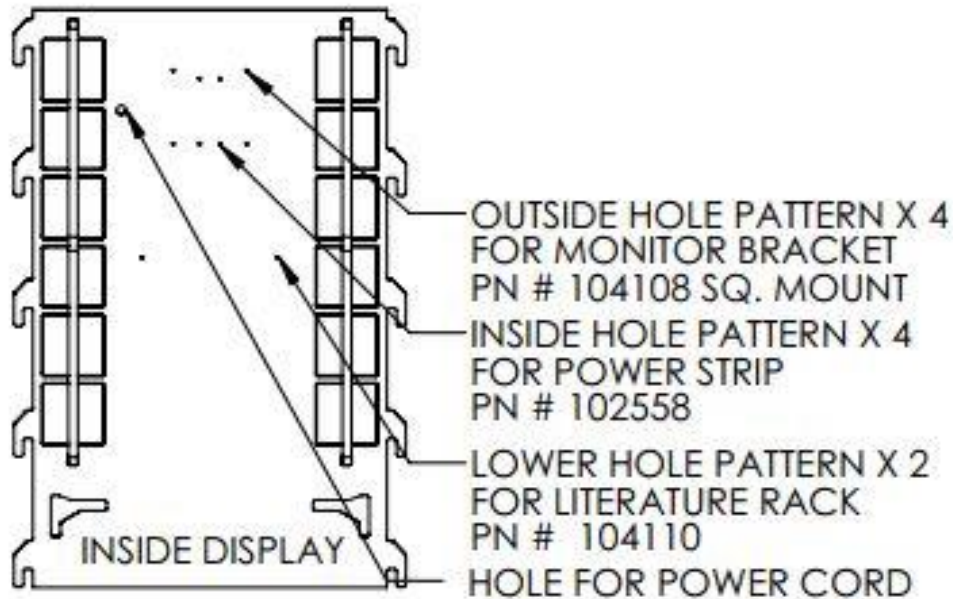

|  | Document Title | | | | Document # | Revision |
|--|--|------------|-----|----------------|------------|----------|
| | Assembly Instructions for Fender Display Kit #104463 | | | | 104759 | 1 |
| | Author | Checked By | | Effective Date | DCN # | Page 6 |
| | BAG | MJL | TJL | 7/12/2019 | 212 | |

- Step 6: Install back panel 104455
- Step 7: Install inner panels 104456 simultaneously
- Step 8: Install arms 104457 & 104458
 - Insert arm brackets horizontally, turn them vertically, and push down to lock the arms into place
- Step 9: Install fender stop arm 104461
 - Fender PM4001 should rest against the stop

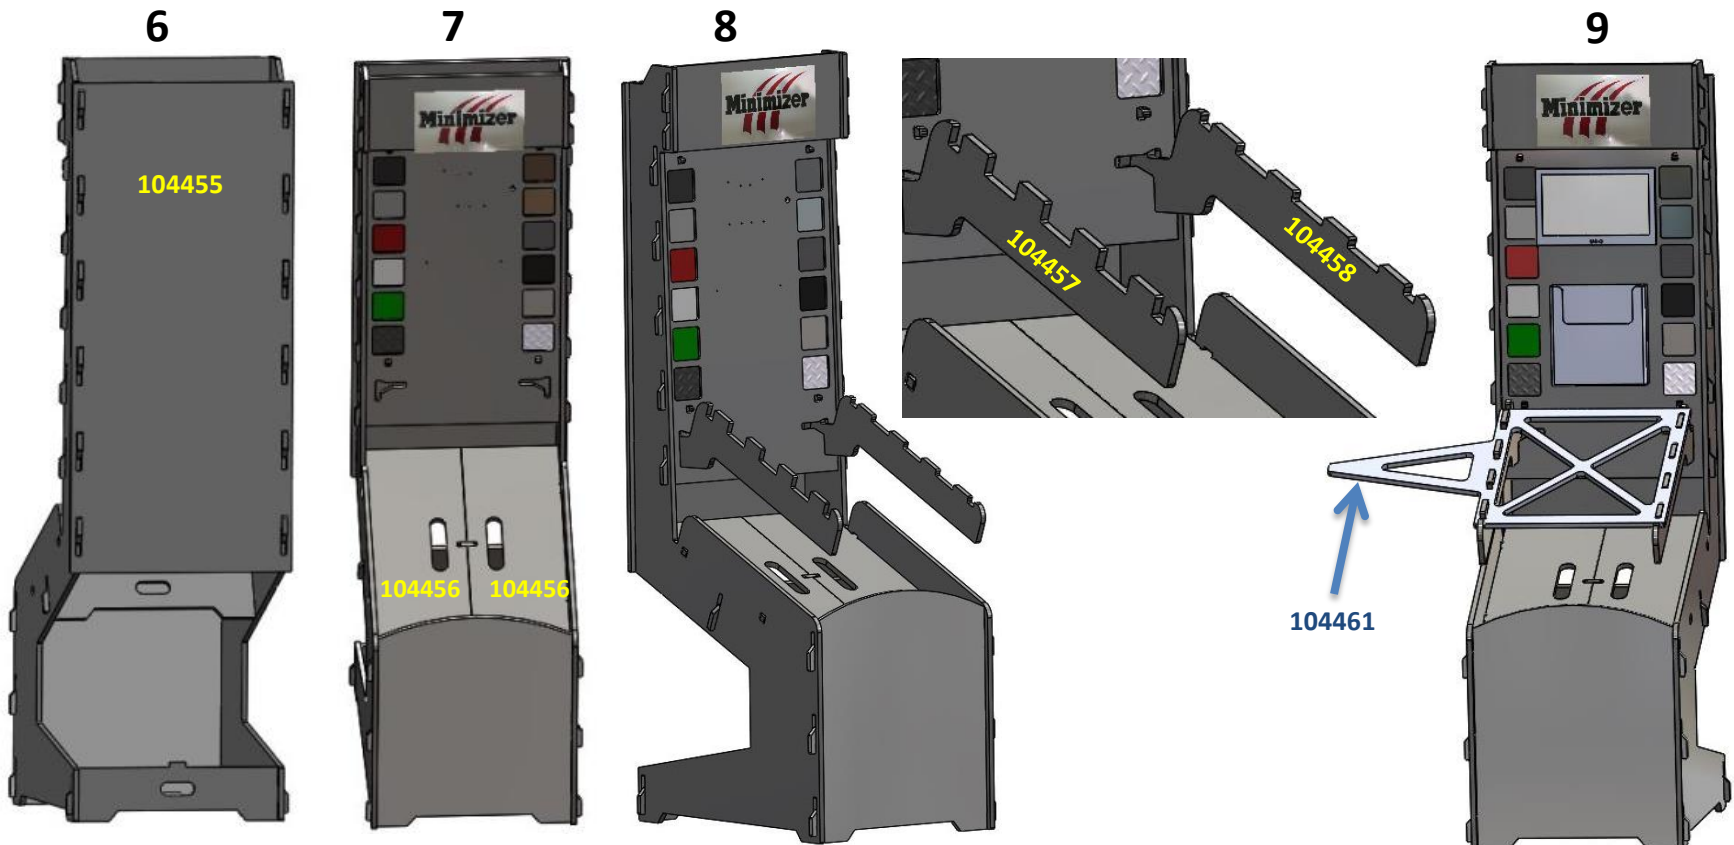

|  | Document Title | | | | Document # | Revision |
|--|--|------------|-----|----------------|------------|----------|
| | Assembly Instructions for Fender Display Kit #104463 | | | | 104759 | 1 |
| | Author | Checked By | | Effective Date | DCN # | Page 7 |
| | BAG | MJL | TJL | 7/12/2019 | 212 | |

- Step 10: Install square monitor bracket 104108
 - Aim the pocket of the square mounting bracket upward as shown below
 - Attach the bracket with (4) mounting screws provided in hardware kit 104120
- Step 11: Install literature rack
 - Use the (2) screws provided in hardware kit 104120 and the pre drilled holes on the panel
- Step 12: Install monitor
 - Plug the female end of the power cord into the monitor
 - Insert the monitor into the square mounting bracket on the stand
- Step 12: Configure monitor and load media
 - Refer to the instruction sheet in the monitor kit
- Step 13 Install fenders 4001 & 2261 in locations shown
 - Fenders are not provided in the display kit
 - Fenders shown are PM4001R & PM2261B

